

Platform MX6

Software option S503

Onboard Configuration Protection

1 Identification

Identification	
Option ID	S503
Order number	S-05000604-0000
Short name	Onboard Configuration Protection
Brief description	With this software option it is possible to protect the configuration of a device against not authorized persons or changes by accident
Revision ID document	V1.0

2 System requirements and restrictions

System requirements and restrictions	
Supported Platforms and devices	Berghof PLC or ET/WT devices of the MX6 platform (e.g.: MCs, CCs, DCs, ETs). Additional information regarding availability and compatibility can be found in options section of the product catalog.
Firmware	MX6 Version 1.19.0 or higher
Additional requirements	
Restrictions	<ul style="list-style-type: none">– Changes made in the web interface can not be handled by this protection– Only digits can be used– Password maximum length is 8 digits– Configuration via web interface only

3 Product description

With this extension it is possible to protect the configuration of a device against unauthorized persons or to be changed by accident. Configuration changes made by the web interface are not protected by this extension.

The protection password can be configured only by using the web interface. Once a password is set, this functionality can be disabled and re-enabled without losing the password. The password may contain only digits and must not exceed a maximum length of 8 digits.

When trying to enter the configuration a password dialog will be shown. The valid password must be entered to continue the configuration. You have 3 attempts to enter the password. If no entry is registered for 20 seconds the device will switch back to status screen. The password has to be entered each time the configuration is started (if protection is active).

4 Quick Start Guide

4.1 Configuration protection setting in the web interface

To change the configuration protection settings select "Config Protection" from the left side in "Configuration". The numeric password can be entered in the "Password" field (see green arrow). The password length can be up to 8 digits. Please note that the password is not displayed in plain text (only black dots). The protection can be activated and deactivated via the checkbox below "Active" (see blue arrow), provided that a password has been entered or already exists. For the changes to take effect, the arrow symbol below "Change" (see red arrow) must be clicked and the device has to be rebooted.

Configuration

- [Network](#)
- [CAN](#)
- [Time and Date](#)
- [Display](#)
- [FTP-Server](#)
- [SSH-Server](#)
- [WEB-Server](#)
- [Users](#)
- [SVC Config](#)
- [Config Protection](#)
- [Reset Config](#)

System

- [Info](#)
- [Licenseinfo](#)
- [Screenshot](#)
- [Update](#)
- [Reboot](#)

PLC-Manager

- [Control](#)
- [Config](#)
- [Application Info](#)
- [Application Files](#)
- [Font Files](#)

Diagnostics

- [PLC Log](#)
- [System Log](#)
- [Ethernet](#)
- [CAN](#)
- [Storage](#)
- [System Dump](#)

Configuration Protection

	Password	Short Description	Active	Change
Configuration	<input style="width: 100%;" type="password"/>	Configuration protection for the display	<input type="checkbox"/>	

Your contact partner can be reached under:

Sales team | T +49.7121.894-131 | controls@berghof.com

Berghof Automation GmbH | Arbachtalstrasse 26 | 72800 Eningen | www.berghof-automation.com

SoftwareOption S503 Onboard Configuration Protection V1 EN.docx